

Using the DVM

These instructions are meant to help you understand screens 5-6/12 in the Heating and Cooling sections of the Hydro-Solar Energy program.

To measure and record voltage (which represents the water temperature) in the table:



FIGURE 1



FIGURE 2



FIGURE 3

1. Open the DVM window by clicking the DVM icon (**Figure 1**). The result of the current voltage measurement will appear on the DVM screen.
2. Wait a moment until the result stabilizes (**Figure 2**). If you receive a “Reset module to continue” message, simply click the OK button and press the Reset button (**Figure 3**) on the Hydro-Solar unit.
3. If you didn't receive a reading, click the Off button on the DVM, then click the V button to access another reading.
4. Once you have a reading, click the Copy button on the DVM.
5. Close the DVM until you have to make another reading, by clicking the X at the top right of the DVM window (as seen in Figure 2), then follow steps 1-4 again.